
### **COOKTOP PARTS**


For Models: SF362LXTB1, SF362LXTQ1, SF362LXTT1, SF362LXTS1, SF362LXTY1

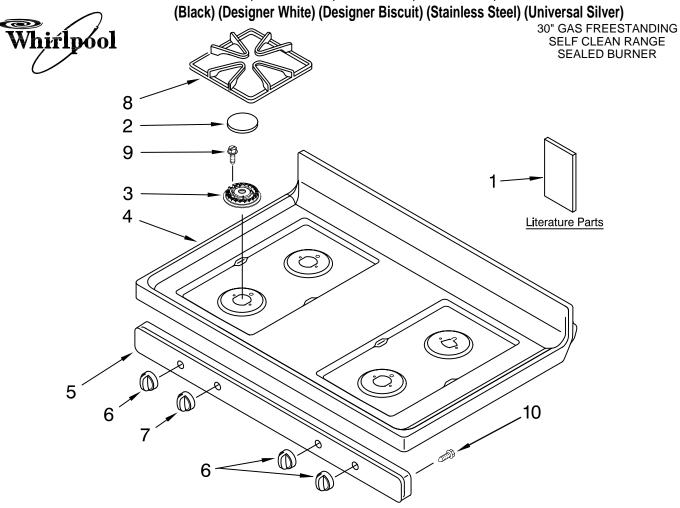

Illus. Part No. No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1 976299 97571- 97571- W101103 W101162 97627- 2 319199 82733- 319199 82733- 319199 82733- 319189 319189	Literature Parts  Installation Instructions Anti-Tip Template Lenglish/Spanish Commers Manual Co	3 4 5	4455981 4455980	Burner Left Front R. Front, L. Rear Right Rear Cooktop White Biscuit Black Panel, Manifold Black White	6 7 8 9 10	8273103 8273104 8273106 8273111 8273112 8273114 8522851 8522850	Knob, Control (3) Black White Biscuit Knob, Powerburner Black White Biscuit Grate, Burner (4) Black Grey Espresso Screw


### **CONTROL PANEL PARTS**

For Models: SF362LXTB1, SF362LXTQ1, SF362LXTT1, SF362LXTS1, SF362LXTY1
(Black) (Designer White) (Designer Biscuit) (Stainless Steel) (Universal Silver)

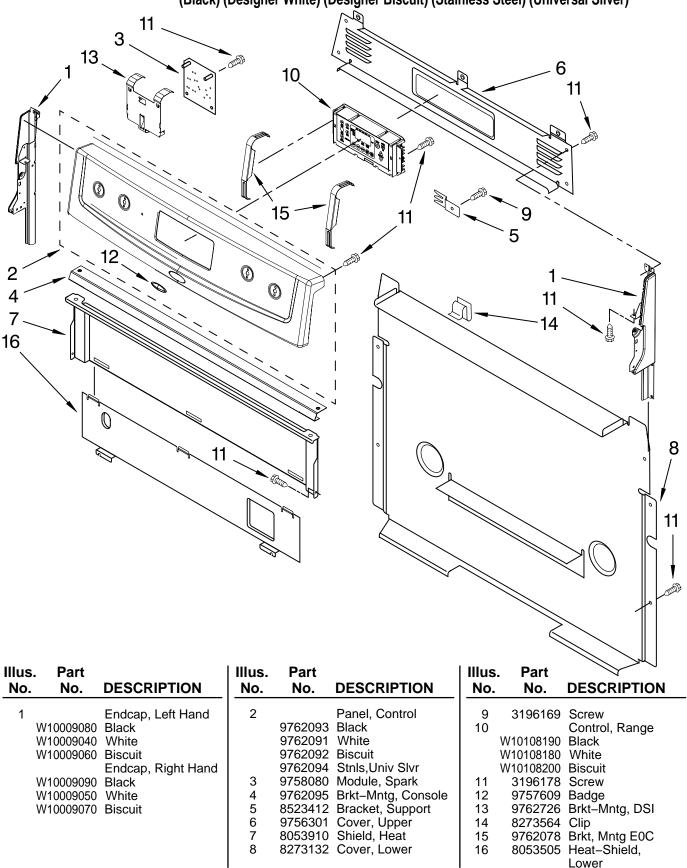

# **MANIFOLD PARTS**

For Models: SF362LXTB1, SF362LXTQ1, SF362LXTT1, SF362LXTS1, SF362LXTY1 (Black) (Designer White) (Designer Biscuit) (Stainless Steel) (Universal Silver)

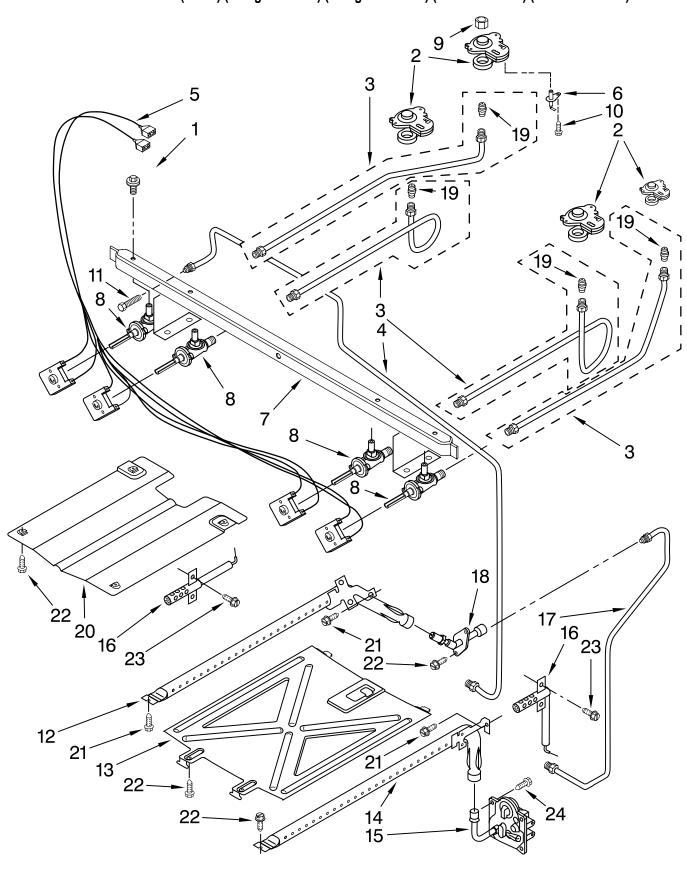

### **MANIFOLD PARTS**


For Models: SF362LXTB1, SF362LXTQ1, SF362LXTT1, SF362LXTS1, SF362LXTY1 (Black) (Designer White) (Designer Biscuit) (Stainless Steel) (Universal Silver)

Illus. No.	Part No.	DESCRIPTION
1	8273096	Screw, Valve
2	02.0000	Burner Base
_	8273700	Large (3)
	8273701	Small (1)
3	02/0/01	Tubing, Burner
Ü		W/Orifice
	8273693	Left Front
	8273698	Left Rear
	8273695	Right Front
	8273697	Right Rear
4	8523402	Tubing (Manifold
	0020402	to Regulator)
5	8523406	Harness, Igniter
3	0020400	(W/Switches)
6	8523793	Electrode (4)
7	9762230	Pipe, Manifold
8	3702230	Valve
O	9757218	LF – RF – LR
	8273004	
9	8273060	Nut (4)
10	8273062	Screw (4)
11	3400228	Bolt
12	8054078	Burner, Broiler
13	8053970	Spreader, Flame
10	0000070	(Oven)
14	9758078	Burner, Bake
15	9761959	Valve/Regulator
16		Igniter
	8054129	Broil
	9758079	
17	8272222	Tubing (Broiler
		Fitting To Valve)
18	3186489	Fitting, Broiler
19		Orifice, Burner
	8273064	Left Front
	8273065	Right Front
	8273066	Left Rear
	8273067	Right Rear
20	8053262	Spreader, Flame
		(Broiler)
21	3196265	Screw
22	3196176	Screw
23	3196385	Screw
24	3400016	Screw

Following Parts Not Illustrated

8523420 Spuds, LP Gas (Kit of 4)

CHASSIS PARTS
For Models: SF362LXTB1, SF362LXTQ1, SF362LXTT1, SF362LXTY1 (Black) (Designer White) (Designer Biscuit) (Stainless Steel) (Universal Silver)

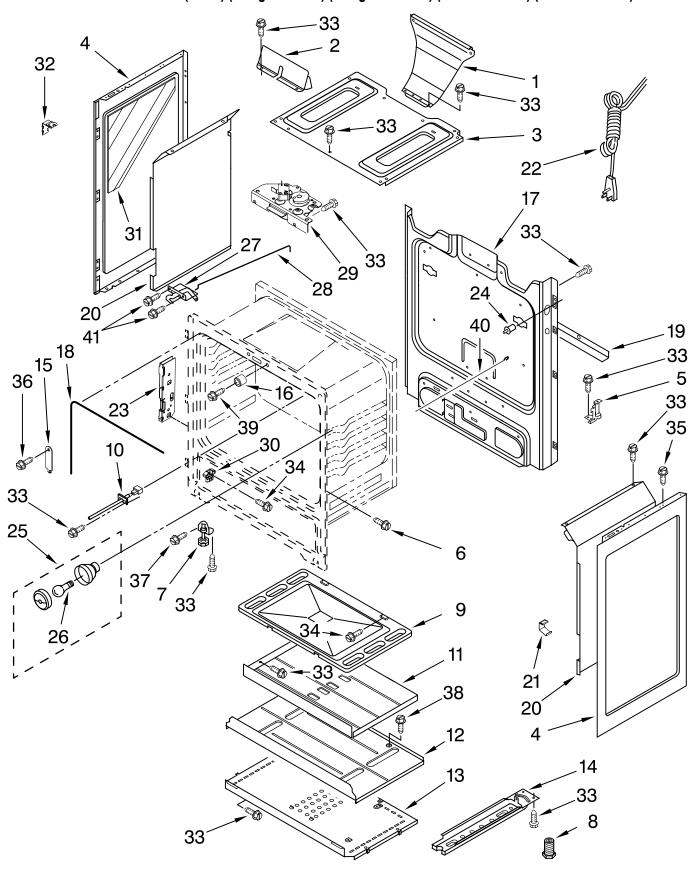


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS
For Models: SF362LXTB1, SF362LXTQ1, SF362LXTT1, SF362LXTS1, SF362LXTY1 (Black) (Designer White) (Designer Biscuit) (Stainless Steel) (Universal Silver)

Illus	. Part		Illus	. Part		Illus	. Part	
No.	No.	DESCRIPTION	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
1	W10012240	Flue Box	18	8522416	Seal, Oven	34	3196152	Screw
2	8272747	Shield, Flue	19	8053971	Brace, Main Back	35		Screw
3	8273036	Burner Box	20		Retainer, Insul.		3196166	White
4		Panel, Side (2)		9761449	Left Hand		8281194	Biscuit
	8053830			9761448	Right Hand		3196168	Black
	8272519	Biscuit-Textured	21	3196576	Clip, Panel (6)	36	W10031780	Screw
		Black-Textured	22		Cord, Power	37	3196179	Screw
5		Brkt, Manifold Mtg	23		Brkt – Hinge	38	3196177	Screw
6	W10067840		24	9757262	Switch, Door	39	3196168	Screw
7		Foot, Front (2)	25		Light Socket Assy	40	9757239	Rod - Door Switch,
8		Foot, Rear (2)	26		Bulb, Oven Light			Rear Mount
9		Bottom, Oven	27		Latch. Door	41	3196560	Screw
10		Sensor, Oven	28	W10078370	Rod, Latch			
11		Baffle, Burner	29	W10107820		INS	ULATION	
12		Shield, Heat	30		Glide, Drawer			
13		Shield, Lower	31	9761490	Insulation		8524099	Insulation, Wrap
14		Rail, Base (2)	32	9761512	Clip, Mounting			Insulation, Back
15		Clip,Door Mntg(2)	33	3196178			8272613	Insulation, Vent
16		Spacer, Door						
17		Back, Main						

**DOOR PARTS**For Models: SF362LXTB1, SF362LXTQ1, SF362LXTT1, SF362LXTS1, SF362LXTY1 (Black) (Designer White) (Designer Biscuit) (Stainless Steel) (Universal Silver)

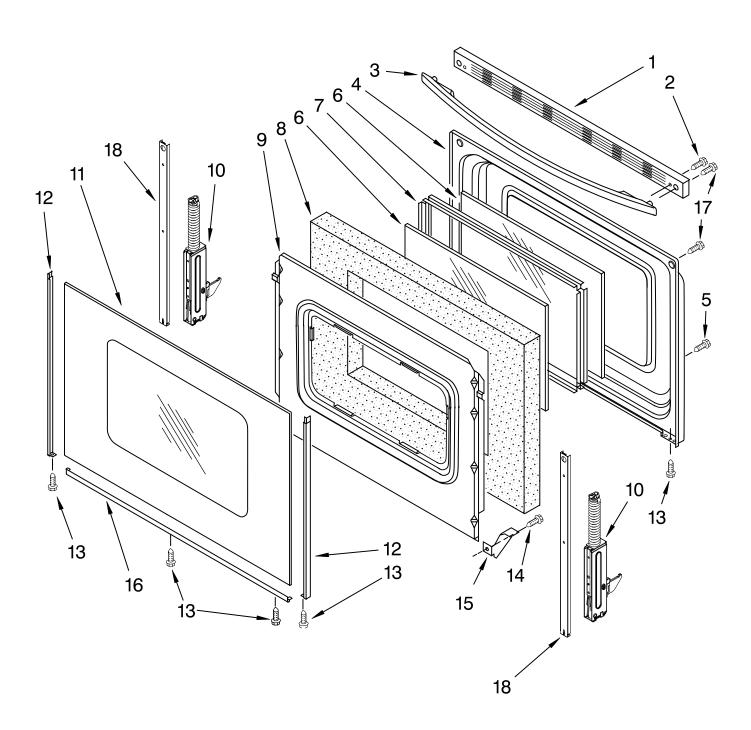


## **DOOR PARTS**

For Models: SF362LXTB1, SF362LXTQ1, SF362LXTT1, SF362LXTS1, SF362LXTY1 (Black) (Designer White) (Designer Biscuit) (Stainless Steel) (Universal Silver)

IIIus No.		DESCRIPTION	Illus No.		DESCRIPTION	Illus. No.	. Part No.	DESCRIPTION
1 2 3 4 5 6 7 8	W10067560 3196164 9761983 9761982 9761984 9761985 9761344 W10031790 9758162 3186289	Biscuit Stainless Steel Universal Silver Screw Handle, Door Black White Biscuit Universal Silver Liner, Door	9 10 11	9761493 9761496 W10075990 W10075980 W10076000 9756435 8523171 8523172 8523173 W10113926 8523165 8523166 8523167	White Biscuit Stnls & Univ Slvr Trim, Door Side Left Hand Black White Biscuit Universal Silver Right Hand Black White Biscuit	13 14 15 16 17 18	8523177 8523175 8523178 8523180 W10067550 W10031780	Screw Bracket, Window(2) Trim, Bottom Black White Biscuit Stainless Model Universal Silver
3 4 5 6 7	9761976 9762394 W10067560 3196164 9761983 9761982 9761984 9761985 9761344 W10031790 9758162 3186289	Biscuit Stainless Steel Universal Silver Screw Handle, Door Black White Biscuit Universal Silver Liner, Door Screw Glass, Inner (2) Frame, Glass		9761496 W10075990 W10075980 W10076000 9756435 8523171 8523172 8523173 W10113926 8523165 8523166 8523167	Stainless Model Glass, Outer Door Black White Biscuit Stnls & Univ Slvr Trim, Door Side Left Hand Black White Biscuit Universal Silver Right Hand Black White	16	8523177 8523175 8523178 8523180 W10067550 W10031780	Trim, Bottom Black White Biscuit Stainless Model Universal Silver Screw

### **DRAWER & BROILER PARTS**

For Models: SF362LXTB1, SF362LXTQ1, SF362LXTT1, SF362LXTS1, SF362LXTY1 (Black) (Designer White) (Designer Biscuit) (Stainless Steel) (Universal Silver)

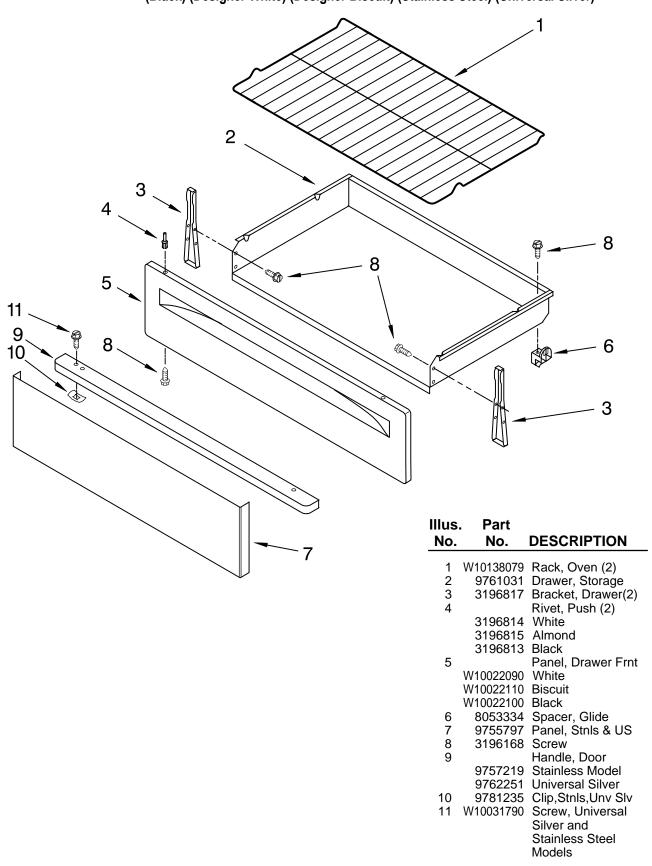

# **OPTIONAL PARTS**

For Models: SF362LXTB1, SF362LXTQ1, SF362LXTT1, SF362LXTS1, SF362LXTY1 (Black) (Designer White) (Designer Biscuit) (Stainless Steel) (Universal Silver)

Illus. Part No. No. DESCRIPTION	Illus. Part   No. No. DESCRIPTION	Illus. Part No. No. DESCRIPTION
Parts Not Illustrated and Optional Parts (Not Included)  SPLICING WIRES25FT.  LENGTH	261514 Insulation, Fiberglass (1–1/2" x 24" x 120") 240132 Insulation, Fiberglass (2–1/2"	ACCESSORY PARTS  241430 Foil, Aluminum Oven (18" x 25') 4396923 Pan – Broiler
242828 Wire, Black 12 Ga. 150° c 242821 Wire, Blue 14 Ga. 150°c 242822 Wire, Brown 14 Ga. 150°c 242830 Wire, Brown 14 Ga. 200°c 242823 Wire, Green 14 Ga. 150°c 242824 Wire, Orange 14 Ga. 150°c 242825 Wire, Red 14 Ga. 150°c 242831 Wire, Red 14 Ga. 200°c  REFINISHING MATERIAL 242756 Touch-Up	x 22" x 120")  PAINT, TOUCH-UP (1/2oz.)  72017 White 4392899 Biscuit 511873 White Porcelain (2 Oz.)  PAINT, PRESSURIZED SPRAY (12 oz.)  350930 White 4392901 Biscuit 285006 Superior Black 206922 Primer (White)  PAINT, BULK (1 qt.)  799344 White (Uncut) 4392900 Biscuit (Uncut)	WIRING HARNESS PARTS  W10082160 Harness, Main (EOC Pyro)  8524207 Harness, Wire Bake/Broil  8523599 Harness, Wire (Cooktop Spark)  W10045060 Harness, Wire (Ground)  3196896 Clip, Wire  313438 Clip, Harness  3196173 Screw  3196696 Clip, Harness  3196174 Screw-Grnd Harns
242830 Wire, Brown 14 Ga. 200°c 242823 Wire, Green 14 Ga. 150°c 242824 Wire, Orange 14 Ga. 150°c 242825 Wire, Red 14 Ga. 150°c 242831 Wire, Red 14 Ga. 200°c  REFINISHING MATERIAL	PAINT, PRESSURIZED SPRAY (12 oz.)  350930 White 4392901 Biscuit 285006 Superior Black 206922 Primer (White)  PAINT, BULK (1 qt.) 799344 White (Uncut)	8524207 Harness, Wire Bake/Broil 8523599 Harness, Wire (Cooktop Spark W10045060 Harness, Wire (Ground) 3196896 Clip, Wire 3400964 Clip, Wire 313438 Clip, Harness 3196173 Screw 3196696 Clip, Harness